



Print User Codes


1) Push User Tools button.

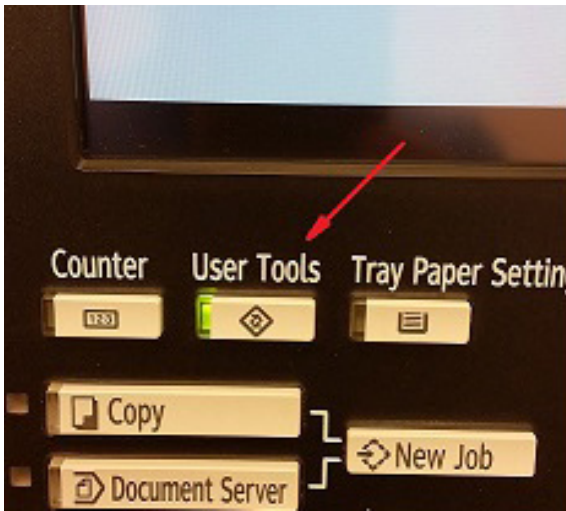


2) Push System settings.

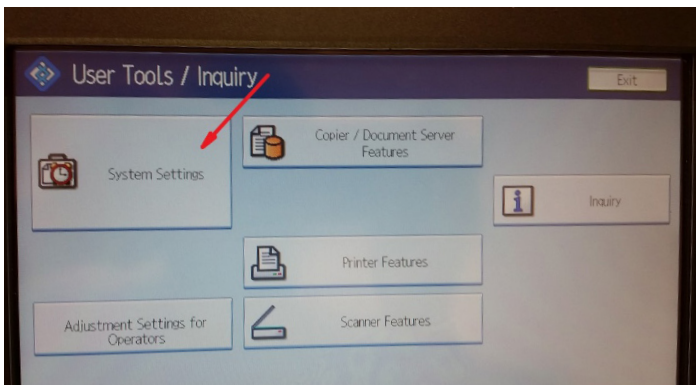


3) Select Administrator Tools Tab and display/clear/print counter per user.

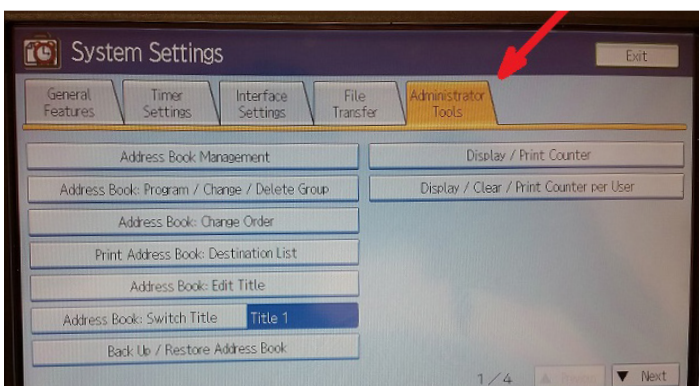

4) Then select Print Counter

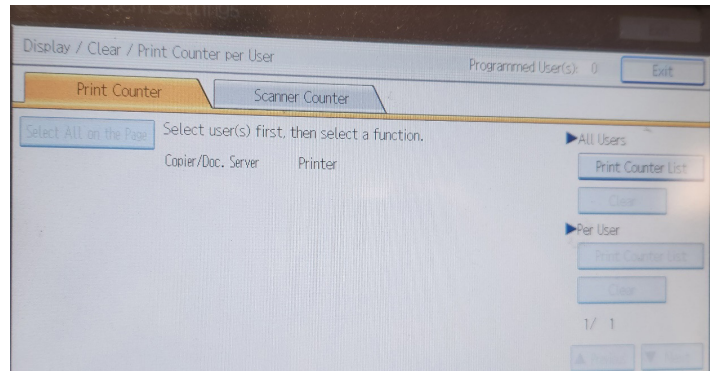

5) Press print counter list and print

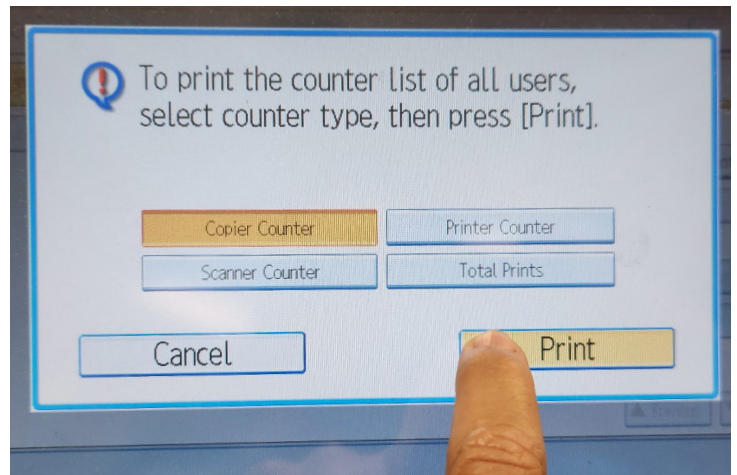

6) Finally, press Exit.